


Mobile Point of Sale

Assembly Instructions

Tip: It is recommended to pair the payment device to the Heartland Restaurant POS application before installation.


1

Remove the faceplate from the enclosure. Do this by inserting a coin or similar flat tool into the corner notches and turn 90° to force the faceplate apart from the enclosure.

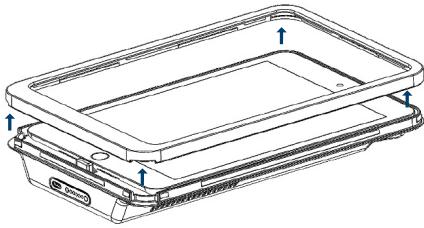

2

Open the card reader compartment using the two clips located on either side of the door. Once open, plug in the pre-installed USB cable to the WiseCube USB port. Insert the WiseCube device into the opening with the NFC/Contactless logo facing DOWN towards the back of the enclosure.

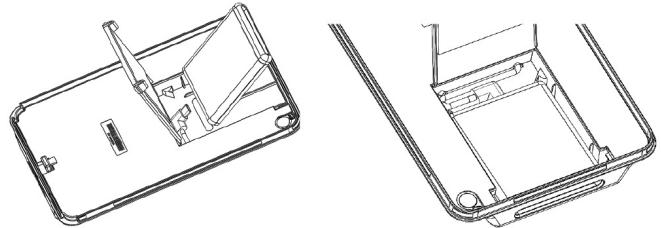


3

Insert the iPad mini into the enclosure. Ensure that lightning port makes connection to the lightning bayonet first before inserting the rest of the tablet.



4


Reinstall the faceplate back onto the enclosure. There should be an audible "snap" once the seal has been made. Inspect all sides of the device to ensure there are no gaps in the seal.

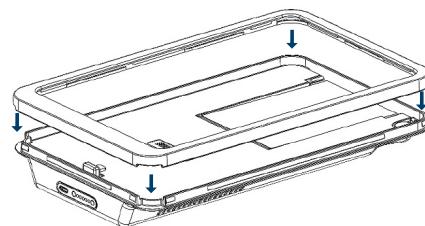

LED Indicator Lights

Internal Battery LED

Connected to Power Source or Battery Power

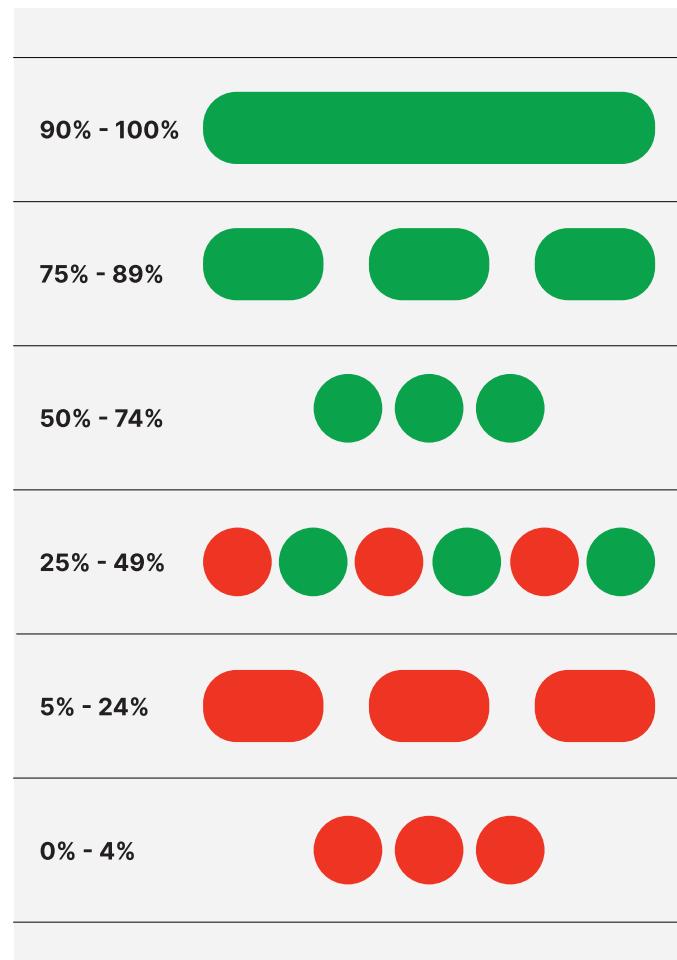


iPad Battery LED

Connected to Power Source



LED Indicator Lights

1. Internal Battery LED
2. iPad Battery LED

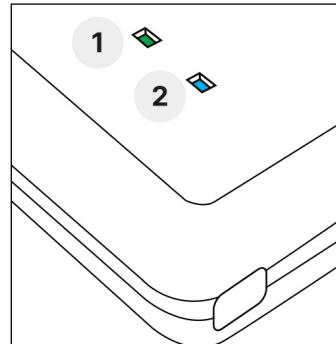

Name
Email Address
Phone Number
heartland.us