

Introduction


This manual describes the setup procedures for the CD4 Series. To use the cash drawer properly and safely carefully read before installing and using this product

Check the Supplied Accessories

- Cash Drawer - 1
- Cash Drawer Cable - 1
- Key (to open/close the drawer) - 2
- Setup Guide - 1


Cable Connection

- 1 Connect one end of the cash drawer cable to the DK connector on the cash drawer.
- 2 While the Printer is turned off. Connect the other end of the cash drawer cable to the external device drive connector (DK connector) of the printer.

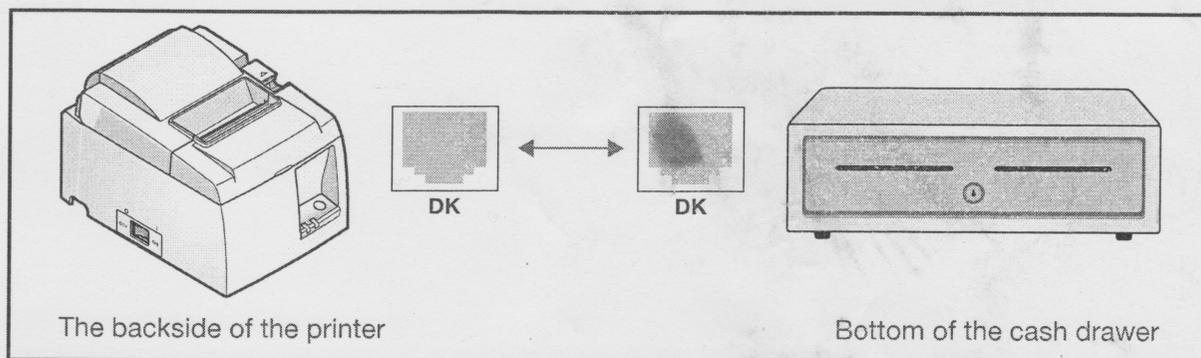

The key lock on the drawer allows you to lock, unlock, and manually open the drawer.

- 1 Lock: Place the key into the key lock and turn clockwise until key lock is horizontal, then remove key.
- 2 Unlock: Place the key into the key lock and turn key lock counter-clockwise until key lock is vertical, then remove key.
- 3 Manually Open: Place the key into the key lock and turn counter-clockwise until drawer pops open.

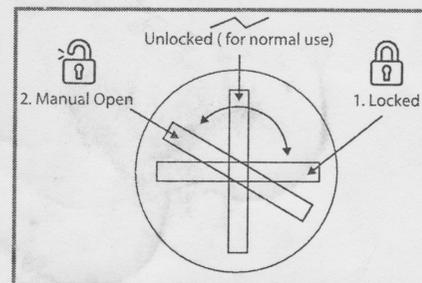

- Keep this product away from liquids such as water. It may cause injury, failure, fire or electric shock.
- Do not place this product in locations subject to high humidity, high dust levels or a direct sunlight. It may cause failure, fire or electric shock.
- Do not bend, twist, or pull the cable strongly. It may cause damage to cable coating, resulting in failure, fire or electric shock.
- Never attempt to repair this product yourself. It may cause injury, failure, fire or electric shock.
- Never disassemble or modify this product. It may cause injury, failure, fire or electric shock.
- Avoid installing this product in unstable locations, such as on a rickety or slanted surface.
- Do not drop, hit, strongly shake or cause impact to this product. It may cause failure.
- Disconnect the cable by pulling out the plug and not pulling the cable itself or the cable may be damaged.
- Do not connect/disconnect the connector while the power of the system is ON. It may cause data loss or failure.
- Do not touch the connector pins with your fingers. Do not short-circuit the connector pins.
- The cash drawer opens towards you. Be careful not to hit your body.
- When closing the drawer, be careful not to get your fingers and hands caught, as this may result in injury.
- Do not use this product for purposes other than those specified.